



DupliX - 2way RC2402

User Instructions -

The DupliX rider headsets are provided as a pair. Coach (Main Transmitter)



With one Coach Transmitter/receiver up to 4 rider sets can be added at a later stage when required.

The RC2402 model is designed to be easy to use and set up. We don't think you need to take instructions with you every time you set up for use by the arena..

The user operation of Coach or Rider transmitters/receivers is identical.

DO NOT yank the headset wire from the radios or wrap it around them after use, as this may damage the mic port or the wires



Use Step by Step Guide -

1. Turn on the Main Transmitter device first

Then turn on all Vice Transmitters for riders.

2. Lithium Ion Batteries and Charging -

The C2R sets are checked in the United Kingdom Prior to despatch. The devices are supplied in a fully charged condition, therefore, when plugged into the supplied charger there will be no red light indication of charging.

If the battery display shows a low capacity, when charging a **red light** will illuminate the display in the top right hand corner. When fully charged the red light will turn off. Please charge the devices in the Power Off position.

Two devices can be charged with the supplied USB UK 240v plug and cables. **NOTE: Do not attempt to charge via the Audio Jack as the connection is different.**

3. Insert the headset into the mic hole.

Make sure the jack is inserted tightly to make a good connection. When new the connection may be tight push well home a few times to make a good first contact. **DO NOT USE FORCE INSERTING OR YANK WIRE FROM THE POST THIS MAY DAMAGE THE DEVICE.**

4. The LCD Display

- (a) Volume - The LCD display will show the volume number on the left hand side. The volume can be set from 0-4. When in Confirm mode (After channels have been set) the volume can be adjusted up or down. Be careful not to accidentally turn the volume up or down by accident when using.
- (b) Channel - The LCD display will show the chosen channel on the right hand side. All devices ship in channel 01. Change this channel to a different number when other radio sets are in use at your location. To adjust the channel press the SET key for a few seconds, the word set will display by the signal strength. Then use the volume keys to choose the desired channel on all devices in your network. Finally press LOCK to select and lock the channel. Up to 50 channels can be selected when more than one set is in use locally.

5. The Headsets

We have chosen two headsets which are comfortable in most ears, with a stable wind resistant and commercial microphones. The microphone can be adjusted so it does not rub on clothing. With most helmets it is possible to insert the earpiece while wearing the helmet, we recommend the rider practices this before mounting the horse. This set comes with one Athlete Earpiece (For rider) and one D-Shape for Coach. However, you may prefer one or the other vice versa. **Both types of earpieces are available to buy online** in our store.

NOTE: The earpieces should be wiped with a disinfectant cloth when used by multiple riders. We recommend the D-Shape earpieces when being used by multiple riders. Do not damage the cord on the headsets by wrapping it around the device. DO NOT insert the microphone jack into the charger input.

NOTES: **Please note the devices are not waterproof**, we recommend keeping them in a dry pocket in extreme weather conditions. Do not leave the units in exposed sunlight when not in use.

NOTE: We carry spares and can offer a repair service to any damaged units. There may be a reasonable charge for this service for non warranty damage. We are here at the end of a phone so don't hesitate to call.